

# Einbauanleitung *frunk* Installation instructions *frunk*

Hyundai Kona Elektro  
Kia e-Niro, Kia e-Soul



## Installation instructions *frunk*

1. Pull off the motor cover with a jerk
2. Put on *frunk*:
  - for attachment point „**A** and **B**“ the box must be threaded under the technical engine compartment edge
  - press on the attachment points and make sure that all four rubber buffers snap into the spacer bolt

3. Fixed posture - finished!


Note:  
Do not load over the upper edge of the *frunk*  
Maximum load 8kg



pic 1



pic 2

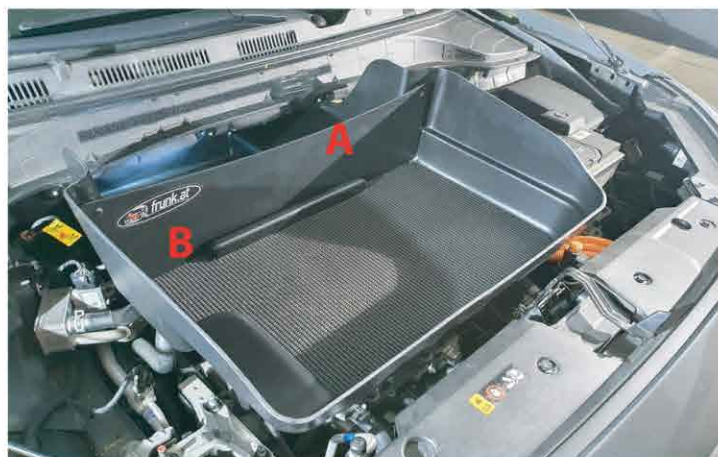

pic 3

## Einbauanleitung *frunk*

1. Motorabdeckung mit kurzem Ruck abziehen
2. *frunk* aufsetzen:  
Reihenfolge einhalten
  - für Befestigungspunkt „**A** und **B**“ muss die Box unter die vordere Motorraumkante eingefädelt werden
  - drücken Sie auf die Befestigungspunkte und achten Sie darauf, dass alle vier Gummipuffer am Abstandsbolzen einrasten

3. Festen Sitz kontrollieren - fertig!

Hinweis:  
Nicht über die *frunk*-Oberkante beladen  
Maximale Beladung 8kg

Viel Fahrspass und  
einfaches Laden!

Have fun driving  
and easy loading!

Alexandra Breinlinger  
Krispl 19  
A-5425 Krispl  
Tel : 0043-676/86861595  
e-mail: info@frunk.at