

make charging easy

Viel Fahrspass und
einfaches Laden!

Have fun driving
and easy loading!



Einbauvideo / Installation video


frunk.GmbH
Krispl 19
A-5425 Krispl
Tel : 0043-676/7551234
e-mail: info@frunk.at



make charging easy

Einbauanleitung *frunk* Installation instructions *frunk*

VW ID.4

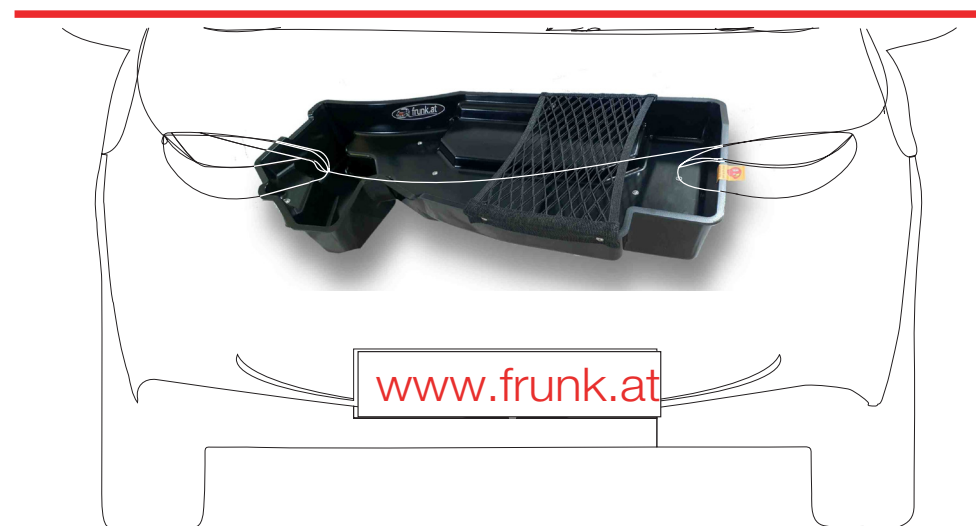

Installation instructions *frunk*

The *frunk* is attached to the pipe support by four retaining clips.

1. Align the retaining clips:
The retaining clips (A, B, C and D) mounted on the *frunk*, according to the position of the pipe support.

pic 1



pic 1

2. Install *frunk*:
By pressing on the retaining clips (A, B, C and D,) in alphabetical order, the *frunk* is fixed on the pipe support.

pic 2



pic 2

3. Check:
Check for a tight fit - done!

pic 3



pic 3

- Notes:
- Do not load above the top edge of the *frunk*.
 - Remove before visiting the workshop.
 - Maximum load 10kg.
 - QR code for installation video on the back.

Einbauanleitung *frunk*

Der *frunk* wird durch vier Halteklammern an der Rohrstütze befestigt.

1. Halteklammern ausrichten:
Die am *frunk* montierten Halteklammern (A, B, C und D), entsprechend dem Verlauf der Rohrstütze, positionieren.

pic 1

2. *frunk* einbauen:
Durch Druck auf die Halteklammern (A, B, C und D,) in alphabetischer Reihenfolge, wird der *frunk* auf der Rohrstütze fixiert.

pic 2

3. Kontrolle:
Auf festen Sitz prüfen - fertig!

pic 3

- Hinweise:
- Nicht über die *frunk* - Oberkante beladen.
 - Vor Besuch in der Werkstatt entnehmen.
 - Maximale Beladung 10kg.
 - QR-Code für Einbauvideo auf der Rückseite.