


Attachment to the installation instructions: Adapter set for Skoda Citigo


Attachment points A and B are occupied by shear bolts and cannot be used to attach the frunk. pic 1

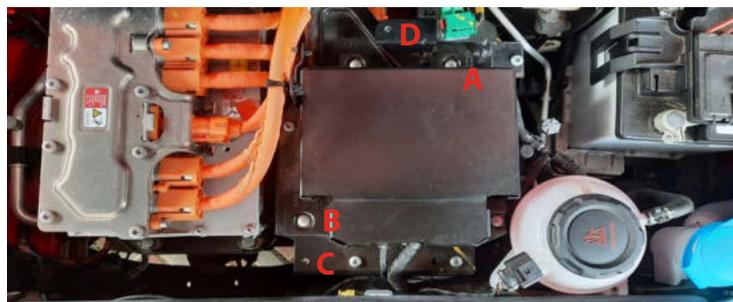

pic 1

1. Mount adapter C:

Mount the adapter C with the hexagon screw M6x22, the washer and the plastic shim at the attachment point C. pic 2

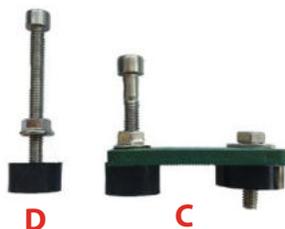

pic 2

2. Mount spacer bolts D:

- Screw the spacer bolt D through the threaded bush D.
- Position the rubber buffer under the mounting plate and screw with the spacer bolt.
- Tighten the locking nut M6 to fix it. pic 3



pic 3



3. Put on frunk.

Beilage zur Einbauanleitung: Adapter-Set für Skoda Citigo

Die Befestigungspunkte A und B sind mit Abreißschrauben belegt und können nicht für die Befestigung des Frunks verwendet werden. pic 1

1. Adapter C montieren:

Der Adapter C wird mit der Sechskantschraube M6x22, der Unterlegscheibe und Kunststoff beilage am Befestigungspunkt C montiert. pic 2

2. Abstandsbolzen D montieren:

- Den Abstandsbolzen D durch die Gewindebuchse D schrauben.
- Den Gummipuffer unter dem Befestigungsblech positionieren und mit dem Abstandsbolzen verschrauben.
- Zum fixieren die Sperrmutter M6 anziehen. pic 3

3. Frunk aufsetzen