Viel Fahrspass und einfaches Laden!

Have fun driving and easy loading!

Einbauvideo / Installation video

frunk.GmbH
Krispl 19
A-5425 Krispl
Tel : 0043-676/7551234
e-mail: info@frunk.at

make charging easy

Einbauanleitung *frunk*
Installation instructions *frunk*

VW ID.7

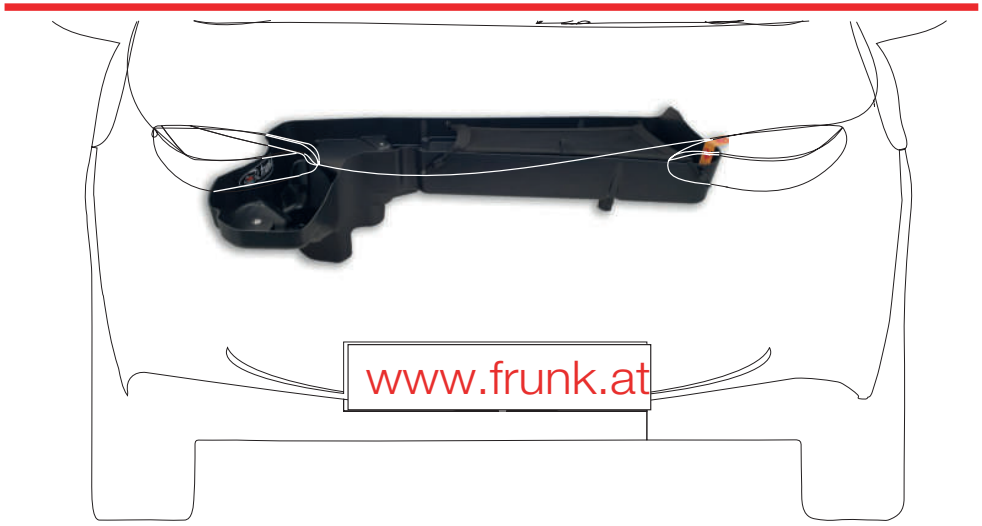

frunk.at

Installation instructions *frunk*

The *frunk* is attached to the pipe support by four retaining clips.

1. Align the retaining clips:
   The retaining clips (A, B, C and D) mounted on the *frunk*, according to the position of the pipe support. pic 1

2. Install *frunk*:
   By pressing on the retaining clips (A, B und C) in alphabetical order, the *frunk* is fixed on the pipe support. pic 2

3. Check:
   Check for a tight fit - done! pic 3

Notes:
- Do not load above the top edge of the *frunk*.
- Remove before visiting the workshop.
- Maximum load 10kg.
- QR code for installation video on the back.

pic 1

pic 2

pic 3

Einbauanleitung *frunk*

Der *frunk* wird durch vier Halteklammern an der Rohrstütze befestigt.

1. Halteklammern ausrichten:
   Die am *frunk* montierten Halteklammern (A, B, C und D), entsprechend dem Verlauf der Rohrstütze, positionieren. pic 1

2. *frunk* einbauen:
   Durch Druck auf die Halteklammern (A, B und C) in alphabethischer Reihenfolge, wird der *frunk* auf der Rohrstütze fixiert. pic 2

3. Kontrolle:
   Auf festen Sitz prüfen - fertig! pic 3

Hinweise:
- Nicht über die *frunk* - Oberkante beladen.
- Vor Besuch in der Werkstatt entnehmen.
- Maximale Beladung 10kg.
- QR-Code für Einbauvideo auf der Rückseite.