


make charging easy

Viel Fahrspaß und  
einfaches Laden!

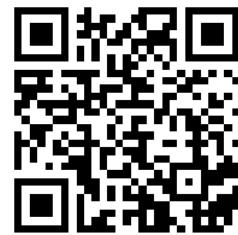

Einbauvideo / Installation video

frunk.GmbH  
Krispl 19  
A-5425 Krispl  
Tel : 0043-676/7551234  
e-mail: info@frunk.at



make charging easy

**Einbauanleitung *frunk***  
**Installation instructions *frunk***



Einbauvideo /  
Installation video

Skoda  
Enyaq / Elroq



## Installation instructions *frunk*

The *frunk* is attached to the pipe support by four retaining clips.

### 1. Align the retaining clips:

The retaining clips (A, B, C and D) mounted on the *frunk*, according to the position of the pipe support.

pic 1



pic 1

### 2. Install *frunk*:

By pressing on the retaining clips (A, B, C and D,) in alphabetical order, the *frunk* is fixed on the pipe support.

pic 2



pic 2

### 3. Check:

Check for a tight fit - done!

pic 3



pic 3

#### Notes:

- Do not load above the top edge of the *frunk*.
- Remove before visiting the workshop.
- Maximum load 10kg.
- QR code for installation video on the back.

## Einbauanleitung *frunk*

Der *frunk* wird durch vier Halteklemmen an der Rohrstütze befestigt.

### 1. Halteklemmen ausrichten:

Die am *frunk* montierten Halteklemmen (A, B, C und D), entsprechend dem Verlauf der Rohrstütze, positionieren.

pic 1

### 2. *frunk* einbauen:

Durch Druck auf die Halteklemmen (A, B, C und D,) in alphabethischer Reihenfolge, wird der *frunk* auf der Rohrstütze fixiert.

pic 2

### 3. Kontrolle:

Auf festen Sitz prüfen - fertig!

pic 3

#### Hinweise:

- Nicht über die *frunk*- Oberkante beladen.
- Vor Besuch in der Werkstatt entnehmen.
- Maximale Beladung 10kg.
- QR-Code für Einbauvideo auf der Rückseite.