Viel Fahrspass und einfaches Laden!

Einbauvideo / Installation video

BMW i5 eDrive

BMW i5 xDrive

frunk.GmbH
Krispl 19
A-5425 Krispl
Tel : 0043-676/7551234
e-mail: info@frunk.at

make charging easy

Einbauanleitung *frunk*
Installation instructions *frunk*

Einbauvideo / Installation video

BMW i5 eDrive

BMW i5 xDrive

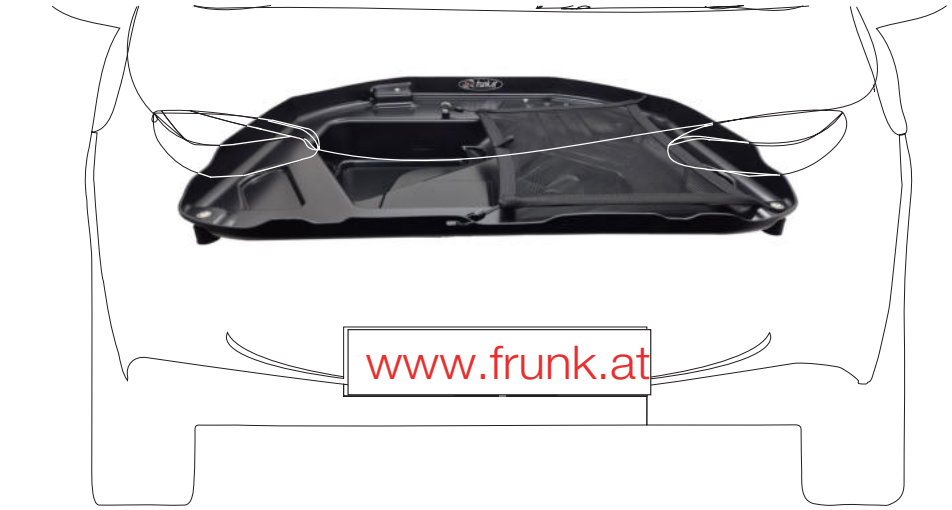

frunk.at

Installation instructions *frunk*

The *frunk* is attached to the existing spacer bolts using four vibration dampers.

1. Pull off the motor cover with a jerk. pic 1

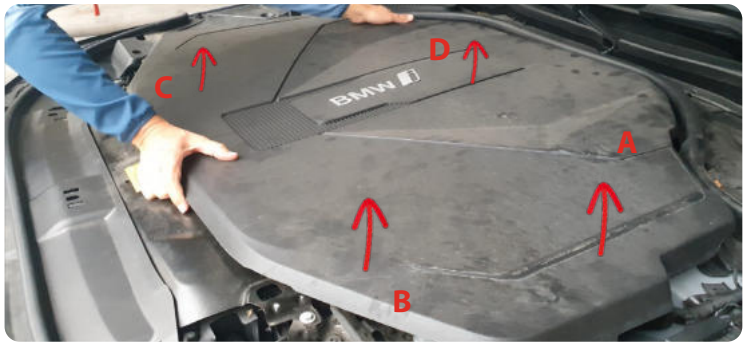

pic 1

2. Install *frunk*:
   - Position the vibration dampers (A, B, C and D) mounted on the *frunk* on the existing spacer bolts. pic 2
   - By pressing on the attachment point (A, B, C and D,) in alphabetical order, the *frunk* is fixed on the spacer bolts.
   - Make sure that all four vibration dampers snap into place on their respective spacer bolts. pic 3

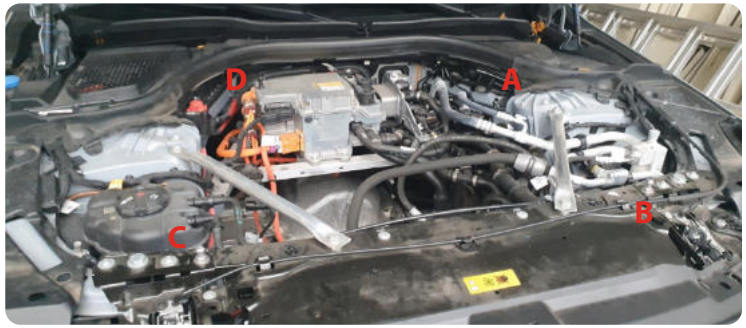

pic 2

pic 3

3. Check:
   Check for a tight fit - done!

Notes:
- Do not load above the top edge of the *frunk*.
- Remove before visiting the workshop.
- Maximum load 10kg.
- QR code for installation video on the back.

Einbauanleitung *frunk*

Der *frunk* wird durch vier Vibrationsdämpfer an den bestehenden Abstandsbolzen (A, B, C und D) befestigt.

1. Motorabdeckung mit kurzem Ruck abziehen pic 1

2. *frunk* aufsetzen:
   - Die am *frunk* montierten Vibrationsdämpfer (A, B, C und D) auf die bestehenden Abstandsbolzen positionieren. pic 2
   - Durch Druck auf die Befestigungspunkte (A, B, C und D) in alphabethischer Reihenfolge, wird der *frunk* fixiert. pic 3
   - Achte darauf, daß alle vier Vibrations dämpfer an den jeweiligen Abstandsbolzen einrasten.

3. Kontrolle:
   Auf festen Sitz prüfen - fertig!

Hinweise:
- Nicht über die *frunk* - Oberkante beladen.
- Vor Besuch in der Werkstatt entnehmen.
- Maximale Beladung 10kg.
- QR-Code für Einbauvideo auf der Rückseite.